



## ASSEMBLY GUIDE: KICKSTAND

VERSION 1



Installation of the Kickstand for Gocycle G2, G3, GS



## CONTENTS


|  |   |
|--|---|
| Contents .....                         | i |
| Overview .....                         | 1 |
| 1. Gocycle Model Identification .....  | 1 |
| 2. Kickstand Assembly Parts List ..... | 1 |
| Tool List .....                        | 1 |
| 3. Kickstand Preparation.....          | 1 |
| 4. Kickstand Installation .....        | 2 |
| 5. Kickstand Adjustment.....           | 5 |



## OVERVIEW

This assembly guide details installation of the Kickstand for G2, G3 and GS Gocycles. If you have any questions, please contact [techsupport@gocycle.com](mailto:techsupport@gocycle.com).

## 1. PARTS LIST

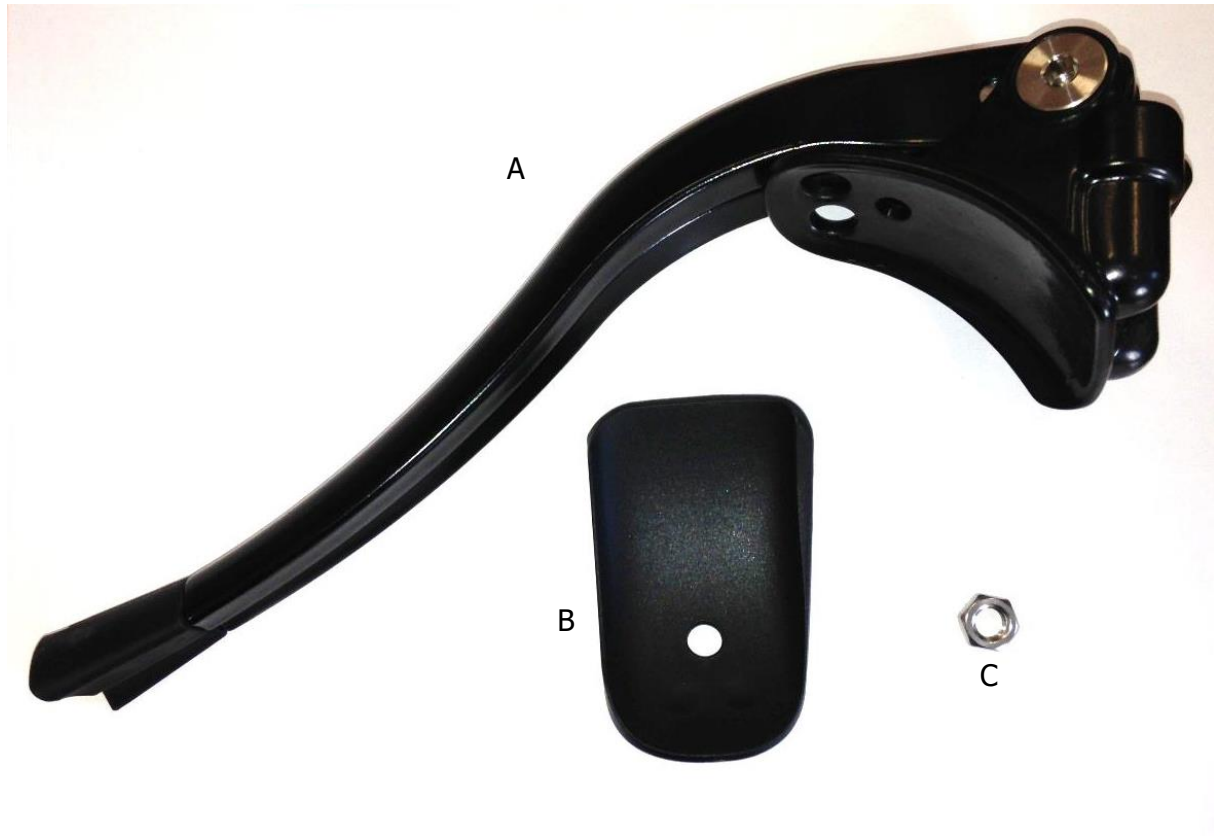

|   | Part Code        | Part Description          | Quantity |
|---|------------------|---------------------------|----------|
| A | KKL-6165-2358-02 | Gocycle Kickstand         | 1        |
| B | KKL-2181-2357-04 | Kickstand Rubber G2/G3/GS | 1        |
| C | KKL-2385-0000-00 | M8 Thin Nut SS            | 1        |

## TOOL LIST

To successfully complete the installation of the Gocycle Kickstand, you will require the following tools. *You can purchase special KKL tools by their tool number detailed below.*

| Part Code | Tool Description |
|-----------|------------------|
|           | 13mm Spanner     |



## 2. KICKSTAND INSTALLATION



2.1. Remove the rubber cover and M8 nut



2.2. Open the Kickstand carefully. Align the kickstand rubber.



2.3. Attach the kickstand in the orientation shown. The legs close towards the **front** of the Gocycle.



2.4. Thread the M8 nut onto the screw



2.5. Use a 13mm spanner to tighten the nut to 20Nm.



2.6. Kickstand fitted correctly



### 3. KICKSTAND ADJUSTMENT

If required, you can adjust the speed at which the Kickstand closes.



3.1 Locate the bolts on the Kickstand main body.



3.2 To slow the closure of the Kickstand, tighten each bolt independently.



3.3 To increase the speed of closure, loosen the bolts each bolt independently.

**Note:** Adjust by small amounts, and test the closure each time

---

**IMPORTANT NOTE: THE ASSEMBLY STEPS MUST BE CARRIED OUT IN ORDER. FAILING TO DO SO MAY RESULT IN DAMAGE TO THE GOCYCLE.**

---

If you have any further queries or comments, please contact Gocycle Technical Support:

[techsupport@gocycle.com](mailto:techsupport@gocycle.com)